

V317 Product Installation Tutorial Jetour T2

Note: Pay attention to protecting the appearance of the central control, you can use a large towel to cover it. Turn off the key switch, do not install with power on.

Product accessories map :



Original car center
console



1. Remove the trim panel in front of the co-pilot of the original car. The original car has 10

buckles.



1. After removing the trim panel in front of the co-pilot, there is a screw on the lower right corner of the original car ambient light bar that needs to be removed.




1. Remove the clip of the original co-pilot trim panel



1. Install the original car buckle to the corresponding buckle behind the V317 screen




1. Connect the USB cable of the display to the storage box of the co-pilot.

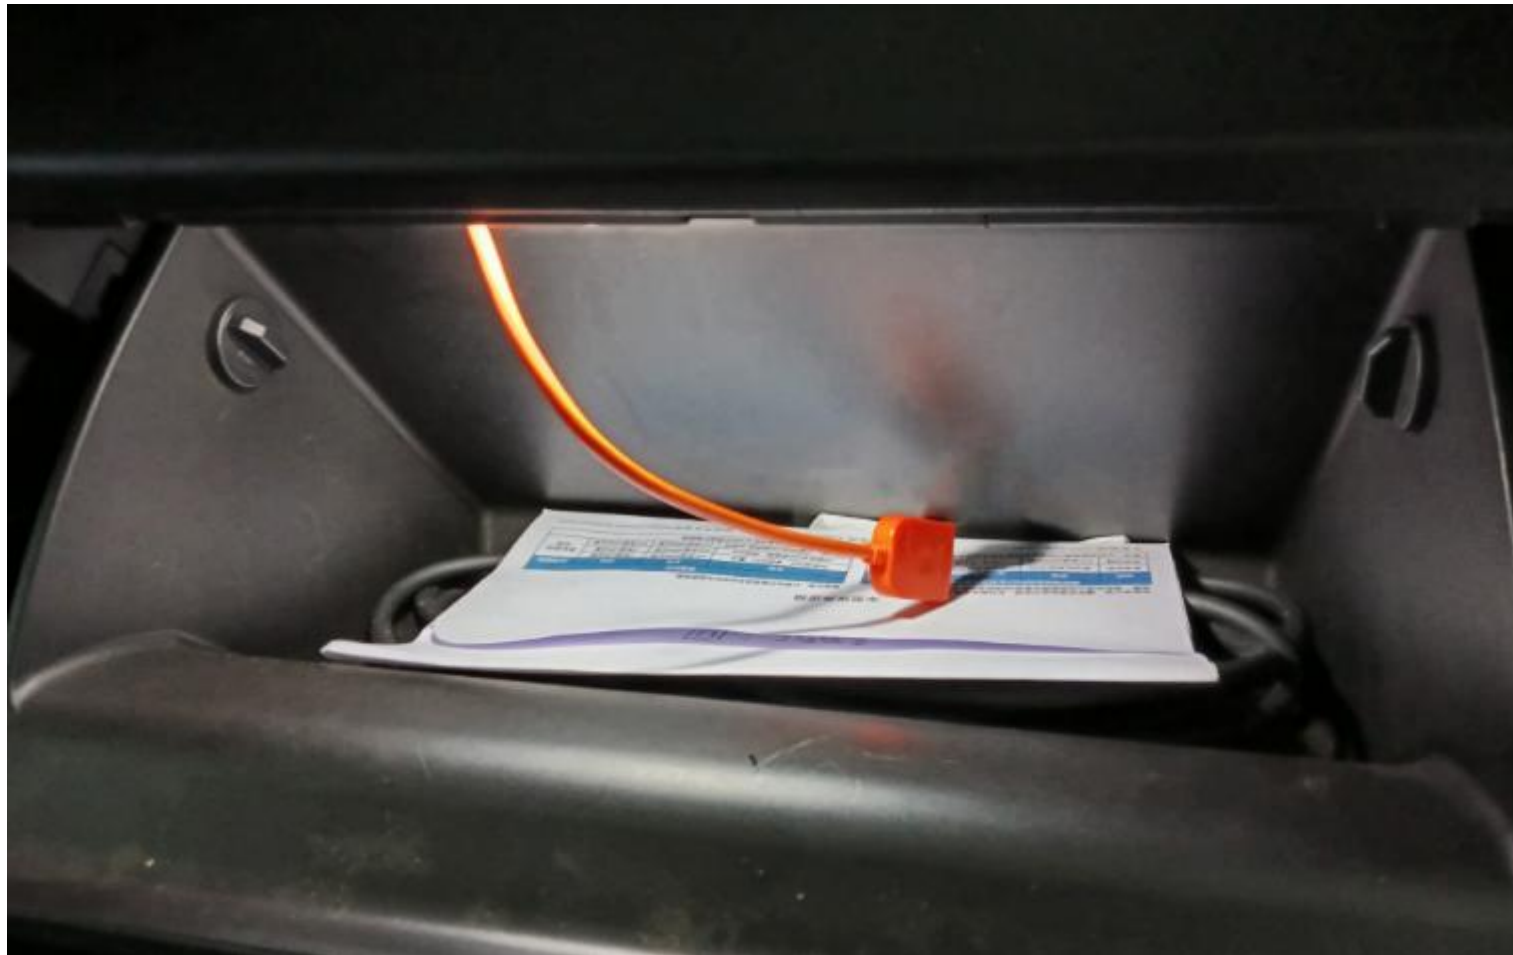


1. Open the small glove box above the left foot of the driver to see the fuse box



1. The second one from the bottom to the top of the third row from the left is ACC, and the fourth one from the bottom to the top of the fourth row from the left is B+

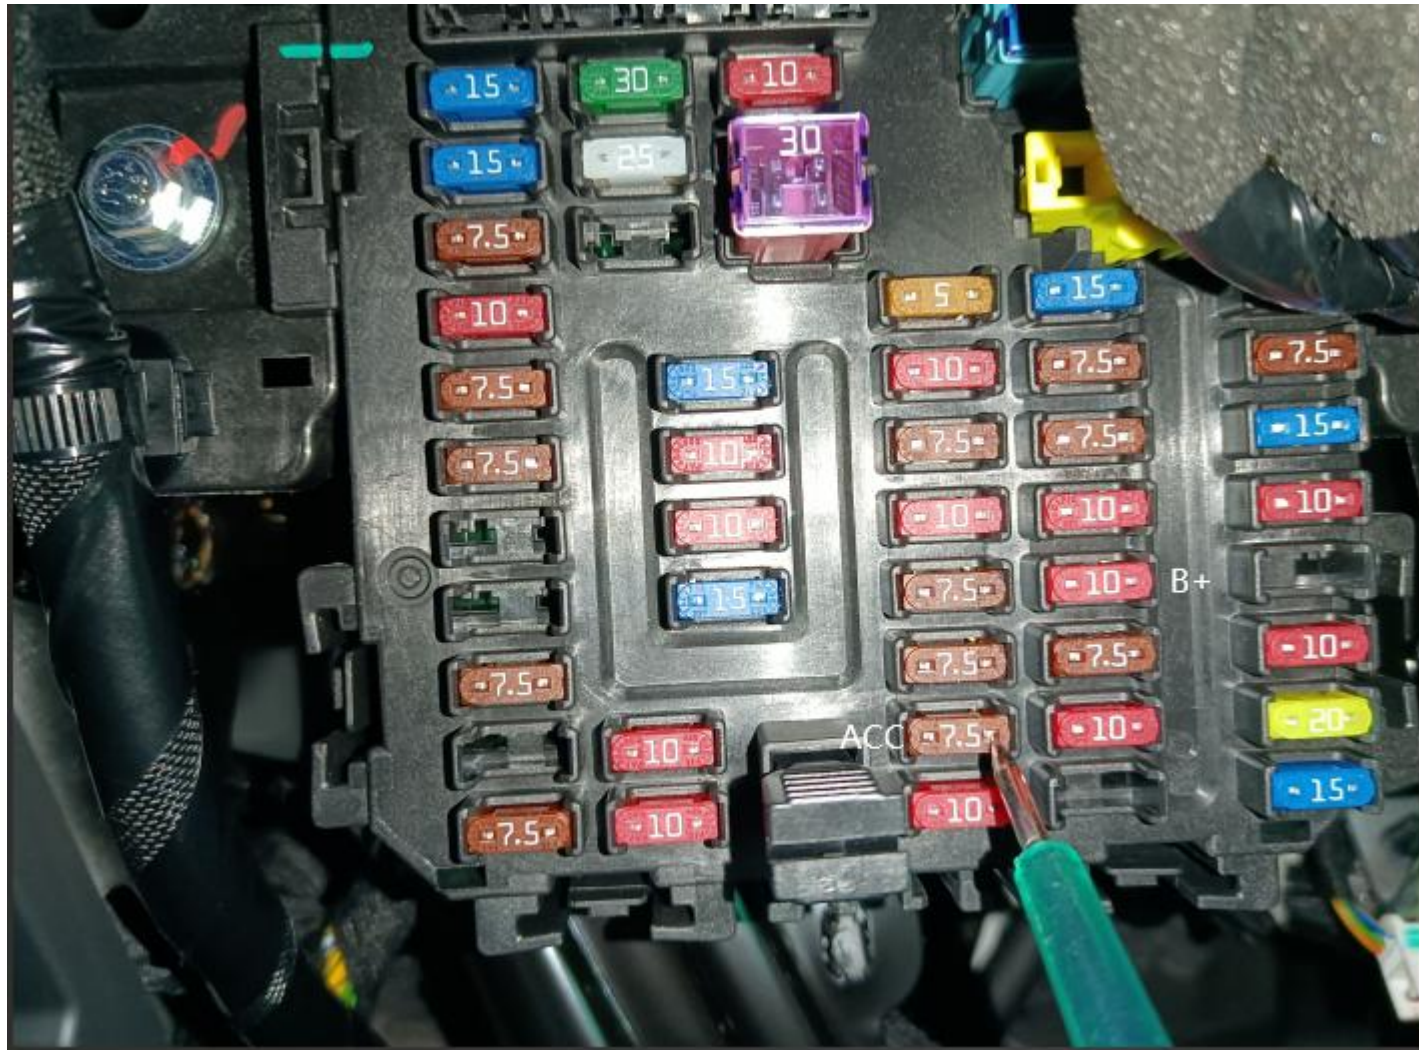

1. Pull out the ACC and normal power fuses and transfer them to the wires.

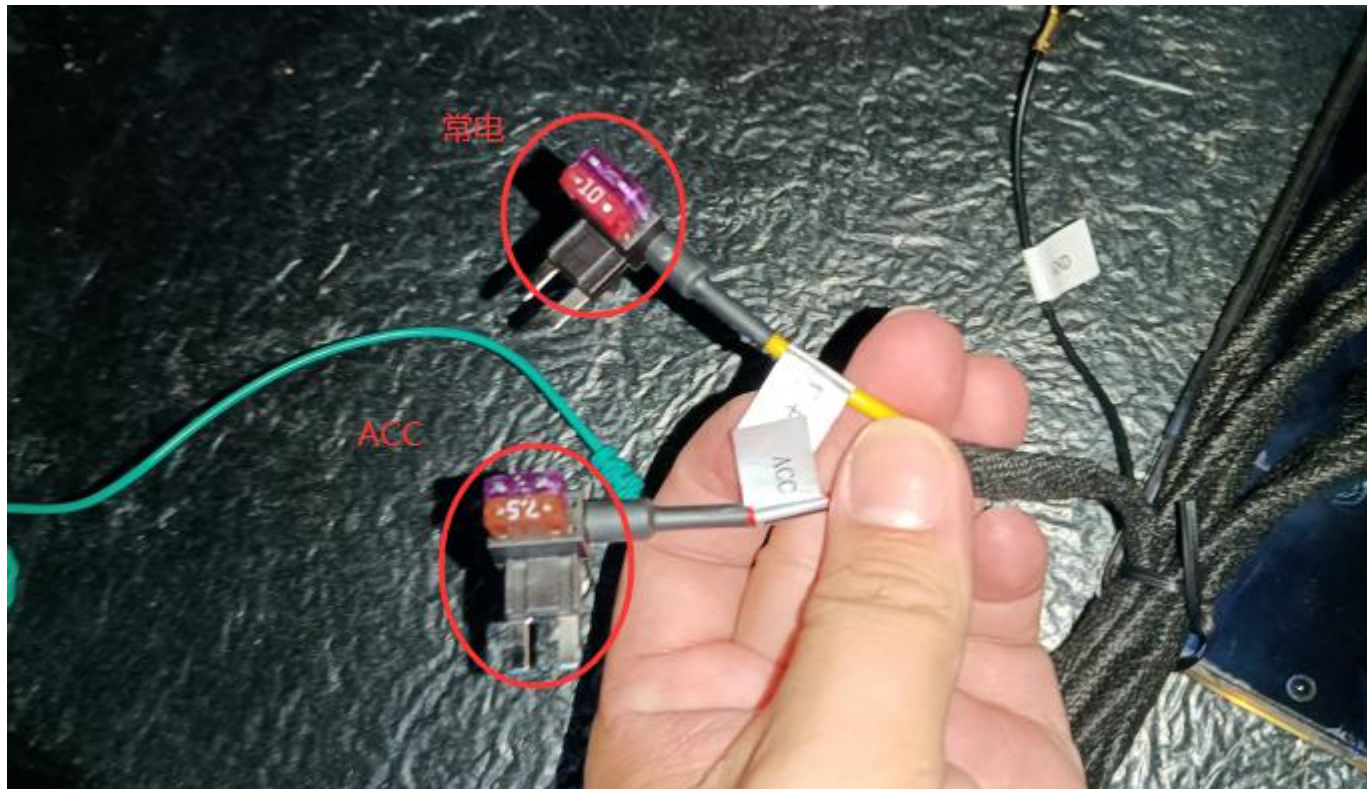

1. Plug the fuses of the power cord and ACC back to the original position of the car.



1. After the wires are connected, power on the machine to test it. Install the screen in front of the co-pilot and snap the buckles behind the screen into place.



The following is the effect picture after installation

